

# Teradek VidiU Setup Guide

## Simple Steps

## Details

1. **Plug in connections (HDMI, audio, Ethernet, power)**



2. **Turn VidiU on**

You should see five screens as the VidiU turns on:

- a. VidiU by Teradek/VidiU is Starting
- b. Let's get you online/Checking internet connection. Watch for "Connected via Wired".
- c. Checking broadcast settings.
- d. Checking for firmware update (if an update is available, upgrade it. It will take about 10 minutes). If Firmware is up to date, it will advance to:
- e. Ready

3. **Obtain IP address**

Using the MENU joystick, Navigate to "network settings" (right once, up twice; press to Enter). Select "Wired." Press the joystick to obtain the IP address of the VidiU.

4. **Open web browser interface**

Open a web browser on a computer connected to the same network and enter the IP address to get to the web browser interface of the VidiU.

5. **Check audio settings**

Check audio settings (upper right corner, click Settings): Make sure the source is set for analog and the volume is at about 35 (Scale only goes to 40). Click "Apply", then go back one screen (upper left)

6. **Check broadcast settings**

From the settings page, click "broadcast", then "platform" to check:

- a. Profile: KennewickStreaming;
- b. RTMP URL: **rtmp://206.127.112.157:1935/Kennewick**
- c. Stream: **services**

Then: "< Settings" and "Done"

7. **Start streaming**

Start streaming by pressing the Red Start/Stop button on the front of the VidiU, or the Green button on the home screen of the desktop interface.

**Ensure that the VidiU screen says "Live" in the upper right hand corner!**

**Once the VidiU is streaming, no settings can be changed without stopping.**

8. **Monitor stream**

Switch to Broadcast View (above the red streaming button) on the home page of the VidiU browser interface, paste *rtmp://206.127.112.157:1935/rtmplive/Kennewick/services* in the URL, and click play.